

Release Notes

Product: ADIC Scalar® 24 Remote Management Unit (RMU) 191E.00002
Date: March 2005

Contents

| Page | Topic |
|------|---|
| 1 | Purpose of this Release |
| 1 | Compatibility Matrix |
| 2 | Resolved Issues |
| 2 | Documentation |

Purpose of this Release

These release notes list corrections to problems that were encountered in previous releases of the Scalar 24 RMU.

Compatibility Matrix

Refer to the following tables for information on firmware compatibility with Scalar 24 RMU:

| Library Firmware | | Drive Firmware | | | | | |
|------------------|------------|----------------|-------|----------|--------------|----------|----------|
| | | LTO-1 | LTO-2 | LC LTO-2 | LTO-3 | SDLT 320 | SDLT 600 |
| SDLT Libraries | 237A.GZ001 | | | | | V82 | V34 |
| LTO Libraries | 306A.GY001 | 4561 | 4AP0 | 4C60 | 52E0 | | |
| RMU Firmware | | SNC Firmware | | | AMC Firmware | | |
| 191E.00002 | | 4.50.02 | | | 4.3 | | |

Resolved Issues

Problems that have been resolved in this release of the Scalar 24 RMU are as follows:

| Change Request Number | Description |
|------------------------------|---|
| CR 34512 | Library Operator Panel Emulation is not visible using IE with Windows XP, SP2. |
| CR 34638 | The RMU does not supply LTO-2 vendor or model data to MIB. |
| CR 34777 | The RMU allows the use of junk characters for a hostname. |
| CR 36006 | The RMU to support LTO-3 and IBM3592 drives. |
| CR 36126 | Add the ability to set additional SNMP target addresses. |
| CR 37479 | When changing the hostname to a blank value, the new value is displayed not properly. |
| CR 37977 | The image of Operator Panel does not always show in IE via an external network. |
| CR 39179 | For RMU 190X all copyright strings should be changed from - 2004 to - 2005. |
| CR 39435 | RMU Sc24 Operator Panel does not update using IE with Windows XP, SP2. |

Documentation

The following documents are currently available for the Scalar 24:

| Document Number | Document Title |
|------------------------|--|
| 62-2301-07 | Scalar 24 Installation and Operation Guide |
| 62-2308-03 | SNC 400 User's Guide |
| 6-00998-03 | SNC User's Guide |
| 6-00064-06 | ADIC Management Console 4.3 User's Guide |